


marantz

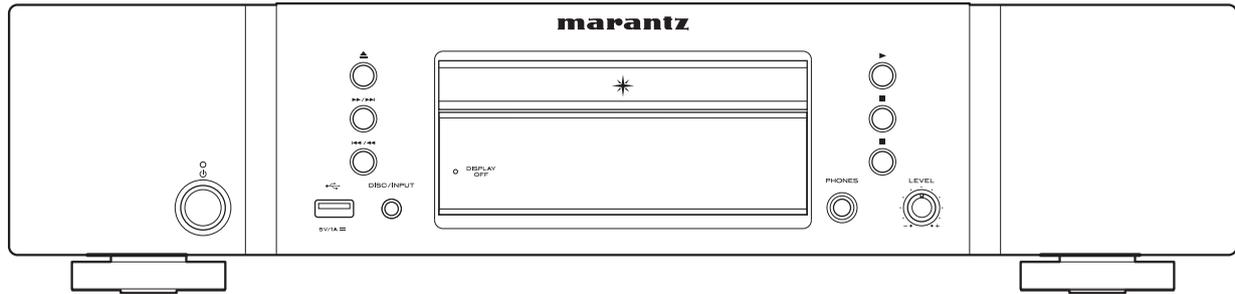

CD6007 | CD Player

QUICK START GUIDE

 
Welcome

Thank you for choosing a Marantz CD player. This guide provides step-by-step instructions for setting up your CD player.

Before You Begin

What's In the Box

Quick Start Guide



Power cord



Owner's Manual



Remote control unit (RC004PMCD)



Safety Instructions



R03/AAA batteries



Warranty (for USA/ for CANADA)



Audio cable



 
CD Player



Remote connector cable



Required for Setup



Amplifier



Speaker systems



Speaker cables




These drawings are for illustrative purposes only and may not represent the actual product(s).

Setup


There are four steps to the setup process.

- 1 Install batteries in the remote control unit
 - 2 Connect this unit to the amplifier
 - 3 Plug the power cord into a power outlet
 - 4 Begin CD playback
-


1 Install batteries
in the remote control unit

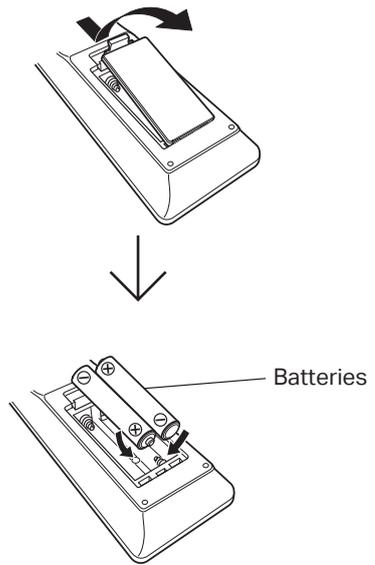

2 Connect this unit to the amplifier

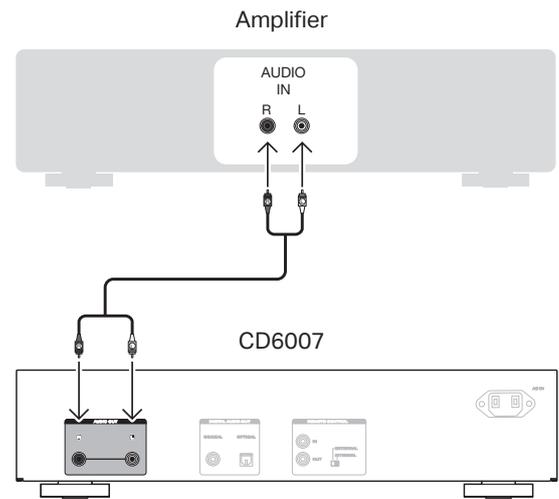

3 Plug the power cord into a power outlet

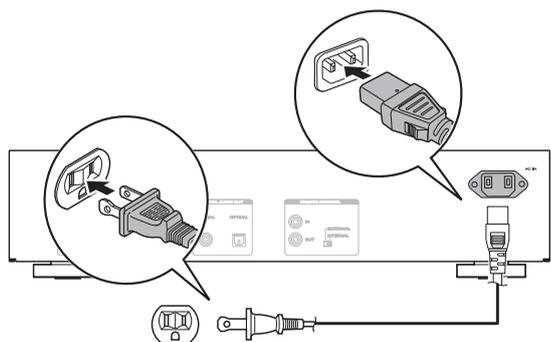

Connect to household
power outlet
(AC 120 V, 60 Hz)

Power cord
(supplied)

4 Begin CD playback


1 Press POWER .



2 Press  to open the disc tray.



3 Place CD in the disc tray.

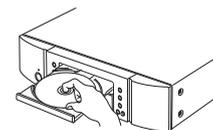

4 Press  to start playback.




Owner's Manual

- Refer to the Online Manual for other functions information and operation procedure details.

manuals.marantz.com/CD6007/NA/EN/



Online Manual

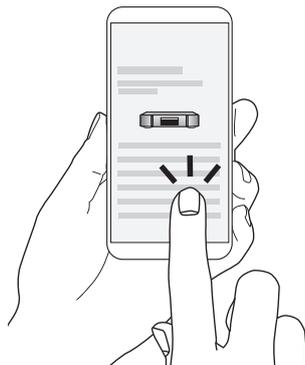

- For more information, visit **www.marantz.com**

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz is a registered trademark.